


18-Speed Kit Mundo Utility Bicycle Assembly Instructions



- Parts included:
- 1- Left Shifter & Cable
 - 2- Front Derailleur
 - 3- Cable Housing
 - 4- Crank
 - 5- Washer
 - 6- Boot
 - 7- Zip ties
 - 8- Bracket

Necessary Tools:

- A- Bottom Bracket tool
- B- Allen Keys
- C- Adjustable Wrench
- D- Socket Wrench

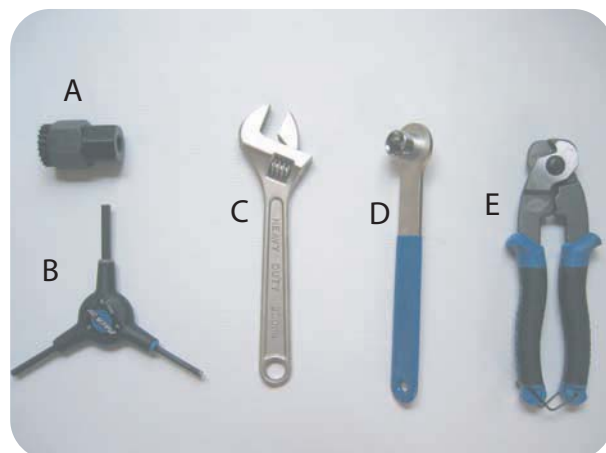



STEP 1:
Set Bottom Bracket Tool (A) carefully in bottom bracket to remove Chainguard Holder.

Note: If Crank is already in place you will need a Crank Arm Puller.



STEP 2:
With Wrench (C) remove Bottom Bracket cap.
Turn clockwise.
Then remove Chainguard Holder



STEP 3:
Place Washer/ Spacer [5] on Bottom Bracket.



STEP 4:
Place Bottom Bracket and tighten counter clockwise with tool (A).



STEP 5:
Install and align Front Derailleur [2]
using Allen Key tool (B).



STEP 6:
Install Crank [4] and tighten using
Socket Wrench (D). Clockwise.
Both Sides.




STEP 7:
Install Bracket [8] and Boot [6], Zip
Ties [7] above bottom bracket near
cable stopper.





STEP 8:
Install Front Shifter [1] on
Handle bar using Allen Key
(A).

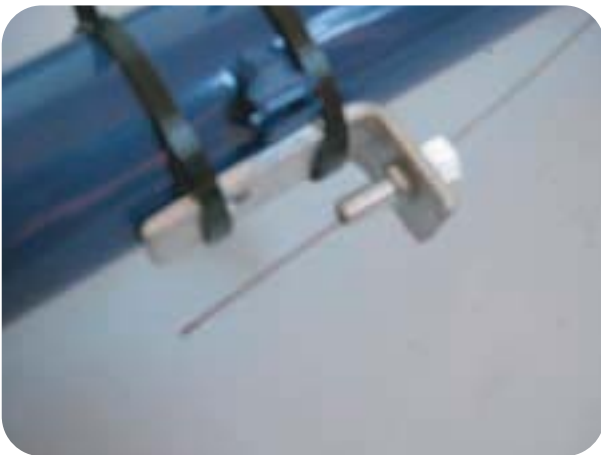

STEP 9:
Run cable through Housing [3] and
Boot [6] on Bracket [7] and derail-
leur [2].

Note that Cable Housing runs
entirely from Shifter [1] to Boot on
Bracket.



STEP 10:
Adjust gears using Derailleur
Manufacturer's instructions
for best adjustment.

And Go Ride!