


yuba™

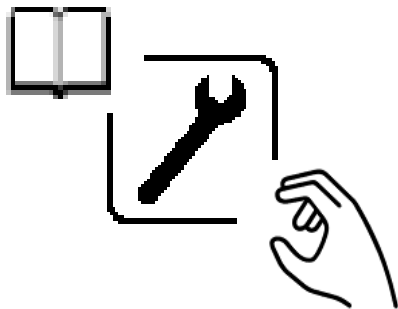

Mundo Utility Bicycle

Mudguard Assembly Instructions
Schutzblech Montage Anleitung
Instructions de Montage
Instrucciones de Montaje

yuba™



info@yubaride.com | www.yubaride.com

mundo



1



A

Assembly Group
Bauteile Gruppe

Groupe d'assemblage
Grupo de montaje

1

Part Number
Bauteil Nummer

Numero de part
Numero de elemento

C **4**

Part of Assembly
Group
Bauteil der Baugruppe

Elements a combines
Combinacion de los elementos

3

Assembly Step
Montage-Schritt

Etape de montage
Etapa de montaje

2

Page Number
Seitenzahl

Page
Pagina

Required tools for proper assembly:

!! Not included !!

- Allen keys 4 / 5 mm
- Wrench 8 / 10 mm
- Heavy side-cutting pliers
- Drill or hole punch 6mm

Benötigte Werkzeuge für die Montage:

!! Nicht im Lieferumfang !!

- Innensechskant 4 / 5 mm
- Schlüssel 8 / 10 mm
- Kraft - Seitenschneider
- Bohrer / Lochzange 6 mm

Outils necessaire a l'assemblage:

!! Non inclus !!

- Clefs type Allen 4 / 5 mm
- Clefs plates 8 / 10 mm
- Pince coupante
- Perceuse ou Tournevis perforateur

Herramientas necesarias:

!! Non estan incluidas !!

- Llave Allen 4 / 5 mm
- Llave inglesa 8 / 10 mm
- Alicates para cortar
- Taladrar



